



## Automatic Safety Shut-Off System

### Initial Set-up & Fixture Lighting

**NOTE: It is always recommended that a licensed plumber installs the Gas Lantern and replacement parts**

**NOTE: DO NOT OVERTIGHTEN BRASS**

Your Bevolo Gas Fixture is equipped with the Automatic Safety Shut-Off System w/ Flame Sensor which consists of a Shut-Off Valve and a Thermocouple (Flame Sensor). The flame sensor can shift during shipping; therefore, before lighting your gas lantern, please check for the proper placement of the thermocouple flame sensor. The tip of the sensor should be just above and behind the tip of the gas jet and slightly outside of the flame. (**Photo 1**).


NOTE: If the flame sensor is constantly inside the flame, this will shorten the life expectancy of the thermocouple.

**Step 1:** Turn gas on inside the light and at the main line or the external shut off valve if so equipped.

**Step 2:** To light, turn the valve knob inside the light counterclockwise, to 2 O'clock position, depress and hold plunger.

**Step 3:** Light the flame and wait 30 seconds before releasing the plunger. Flame should remain lit. (**Photo 2**).

**Step 4:** Adjust the flame height with the valve knob.

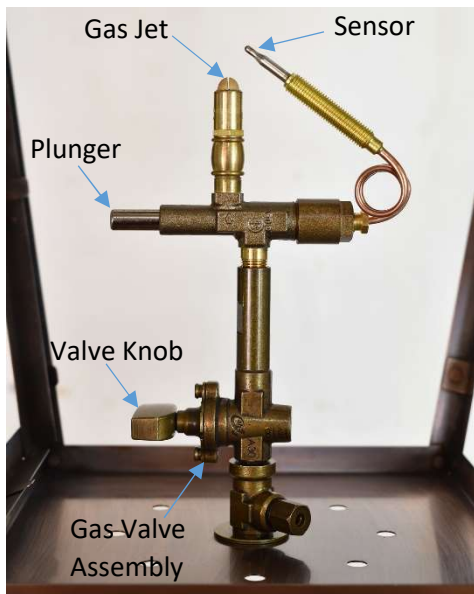

*Photo 1*



*Photo 2*